

MODEL #: ORVT44L4K

UPC #:: 765364023842

# 4' Vapor Tight



#### **Electrical Specifications**

- Input Wattage: 40W
- Efficacy: 113 LpW
- AC Input: 120/208/240/277 V
- Driver: Constant current, Class 2, 120-277VAC 50/60Hz
- Ambient temperature of 104°F/40°C
- Minimum ambient operating temperature of -40°F/°C
- Dimming: 0-10V

# **Lighting Specifications**

- Total Lumens: 4,500
- Color Temperature: 4000K
- Color Rendering Index: 80

# **Housing Specifications**

- 1-piece housing is made of durable polycarbonate material
- Lightweight & durable
- · Color: White
- Lifespan: 50,000 hours

### Lens

• Polycarbonate

### Listings

- UL/cUL standards for wet locations
- IP65
- DLC Premium qualified luminaire, eligible for rebates from DLC member utilities.
  DLC Prod. ID: PLPPM8FMONR5


# Warranty

• 5-Year limited warranty



Model	Watts	Lumens	Volts	Color Temp.
ORVT44L4K	40	4,500	120-277	4000K

# Photometrics

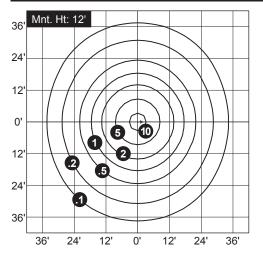

Light Loss Factor	1.00
Total Lumens	5117
Mounting Height	12'
Max. Calculated Value	11.69Fc




MODEL #: ORVT44L4K

UPC #:: 765364023842

# 4' Vapor Tight

#### Dimensions

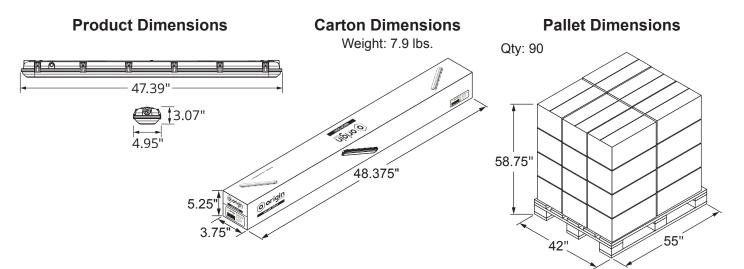

### Installation

- Secure the mounting bracket clips to the mounting surface secure the fixture by attaching the other side. There should using the appropriate hardware (provided by others)
- **2a.** Attach one side of the fixture to both brackets, and then be a "click" when the second side is secured
- 3a. If connecting to a conduit pipe, unscrew the desired plug and attach the pipe. Apply silicone RTV (provided by others) to threads for water-proof seal
- **3b.** If conduit piping is not used for installation, silicone RTV must still be applied to the conduit plugs for water-proof seal
- 4a. Unclip the lens to expose the LED gear tray. Set lens aside
- 5a. Remove the four phillips screws that secure the LED gear tray. LED gear tray will hang from plastic straps and the LED driver will be accessible for electrical connection
- 6a. Wire the fixture leads to the supply leads per Figure 1 below
- 7a. Reattach the LED gear tray. Be careful not to pinch any wires.
- 8a. Replace the fixture lens. Make sure the plastic clips are properly seated when locking the lens in place. Snap clips to the lens to secure and seal the fixture

